


# Reconfiguring Standard 21-Chord Autoharp for Folk, Bluegrass, and Country (Variation 2)

Involves refelting the Eb, F7, Ab, Bb7, and Cm chord bars to add E, F#7, Bm, F#m, and C#m.


Reconfigure Eb for E Major; move to right end.\*

Move remaining chord bars to the left one space.

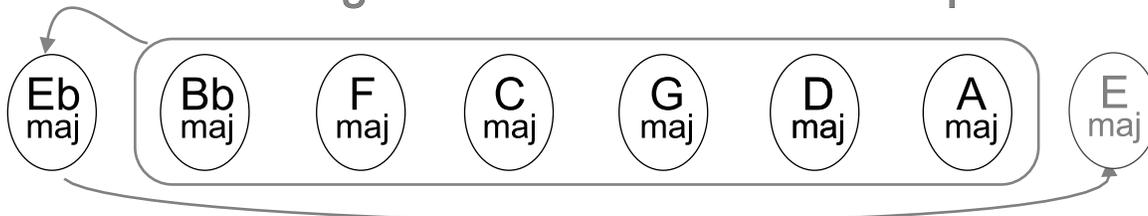


Reconfigure F7 for F#7; move to right end.

Move remaining chord bars to the left one space.

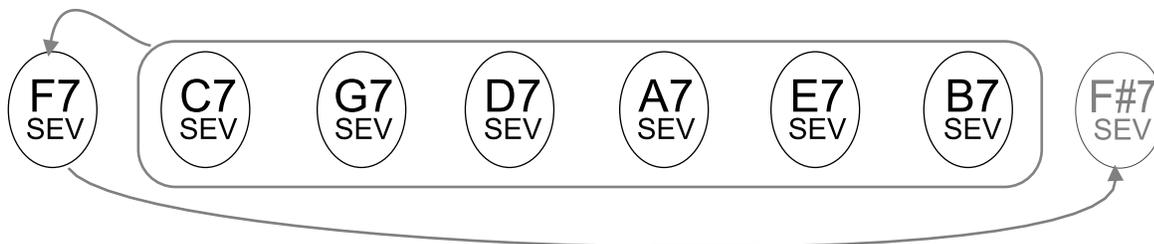

Reconfigure Ab and Bb7 to Bm and F#m; move to right end.

Move remaining chord bars to the left two spaces.

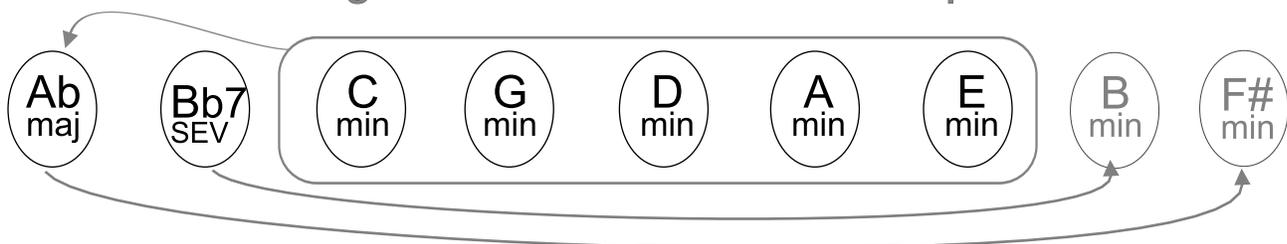

**Alternatively, replace the Cm as well.**

